

FEATURES

- Allows reading RFID cards in the 13.56 MHz band for access control and intercommunication.
- The module integrates two interchangeable GetFace bus connectors for connections to/from the GetFace IP Basic Unit or other modules. If this module is the last one on the bus, one of the connectors remains unconnected.
- GetFace bus cable included (220mm long).
- Please refer to the frame assembly instructions and the GetFace IP manual for installation.
- Maximum consumption: 0.82W (0.07A @ 12VDC).
- Conformity with the CE directives.
- Supported devices (only the card serial number is read):

ISO/IEC 14443A: Mifare Classic 1k & 4k, DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C

ISO/IEC 14443B: CEPAS, HID iCLASS

JIS X 6319: Felica

ISO 15693

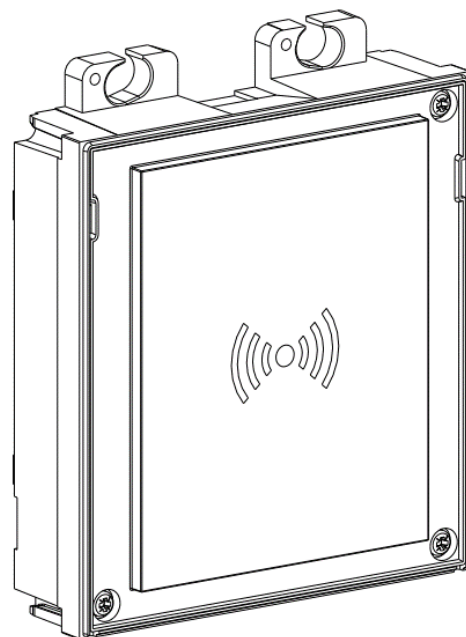



Figure 1. Smart card RFID reader

SAFETY INSTRUCTIONS

- Installation should only be performed by qualified professionals according to the laws and regulations applicable in each country.
- Do not connect the mains voltage nor any other external voltage to any point of the signal wiring; it would represent a risk for the entire system. The facility must have enough insulation between the mains (or auxiliary) voltage and the signal wiring or the wires of other accessories, in case of being installed.
- Keep the device away from water and do not cover it with clothes, paper or any other material while in use.
-  The WEEE logo means that this device contains electronic parts and it must be properly disposed of by following the instructions at <http://zennio.com/weee-regulation>.